After completing each step, check the box ☑ **For questions, contact 1-800-SAMSUNG (726-7864)**

1. Check if the entrance is wider than 32 1/4”

☐ Check

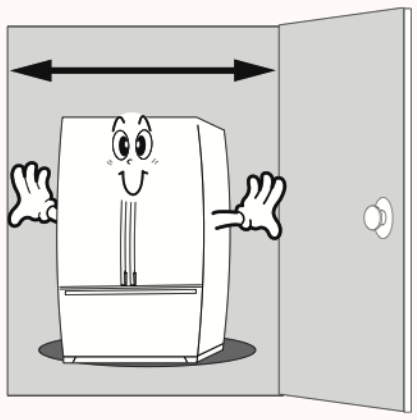

2. If Entrance is less than 32 1/4” wide, remove the Doors.

∗ Reassemble in reverse order. Be sure to reattach and tighten all bolts.

☐ Check

FREEZER

A

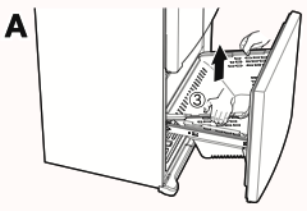

Take out the lower basket(③) by lifting the basket from rail system.

B

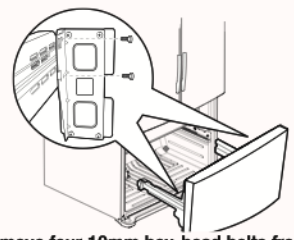

Remove four 10mm hex-head bolts from both sides.

C

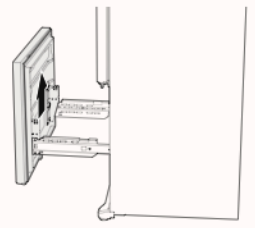

Lift the freezer door up from the rails.

FRESH FOOD

A

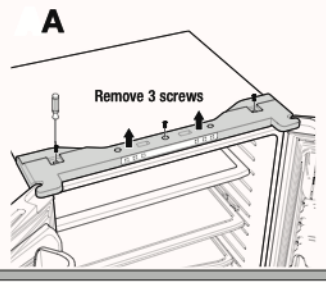

B

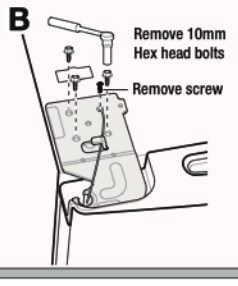

C

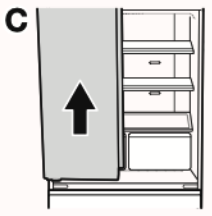

Lift the door up to remove

3. Water Installation

∗ Make sure water does not leak.

☐ Check

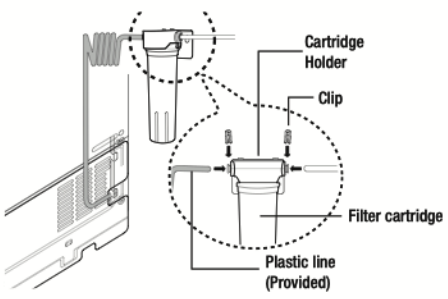

4. Connect Power

☐ Check

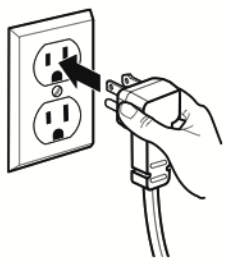

See grounding information attached to power cord.

5. Level unit

☐ Check

A

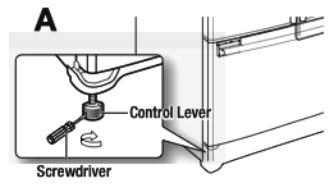

Lower support legs to touch the floor. If unit be moved, raise the support legs before moving the unit.

6. Door Alignment

∗ Make sure doors are properly aligned

☐ Check

B

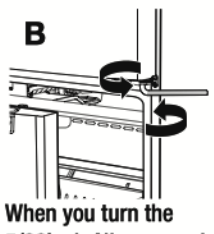

When you turn the 5/32inch Allen wrench counterclockwise (⌣), the door will move up.

C

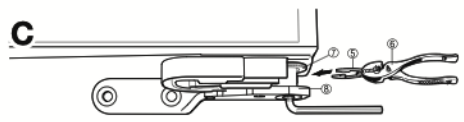

After adjusting the doors, please insert the supplied fastener-ring (⑤) using a pair of pliers (⑥) in the gap between the hinge-grommet (⑦) and the lower hinge(⑧). The number of the fastener-ring to insert depends on the gap.

Two fastener-rings are enclosed with the refrigerator.

7. Make sure the fridge is not in cooling off mode

☐ Check

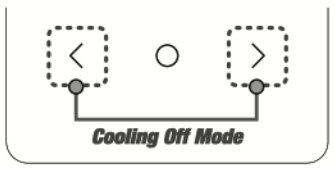

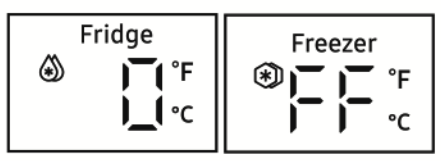

When “0, FF” is shown on the display
To cancel the cooling off mode, press and hold (〈) and (〉) together for 6 seconds and then press (◯) once the display blinks.
Refer to User Manual for more information.

8. Set Temperatures

☐ Check

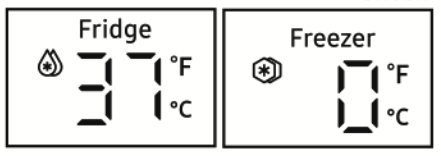

Recommended setting
· Fridge : 37 °F
· Freezer : 0 °F

ENGLISH

Door removal for entrance

[EN] Depending on the model that was purchased, the door disassembly procedure, shape of parts and number of screws may differ. Instructions for disassembling and assembling the door are explained in detail in the instruction manual supplied with the product. Before Installing, must measure refrigerator depth & house door width. In case of clearance less than 4 inches, must detach doors from Unit and move it into the house.

Detach the fridge doors

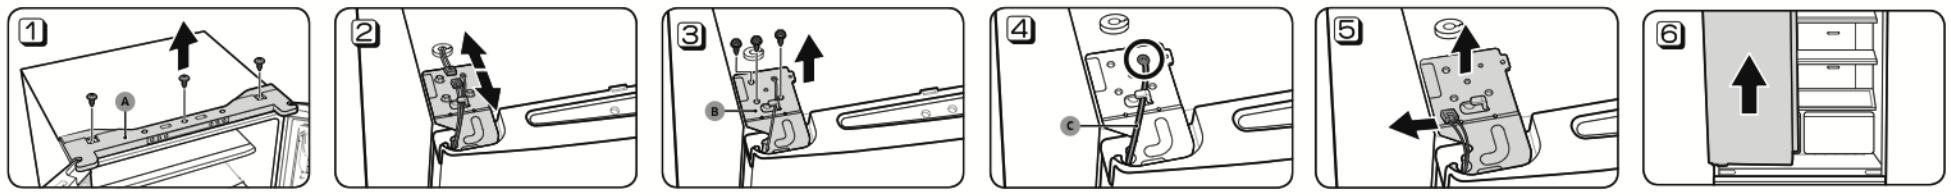

Detach the freezer drawer

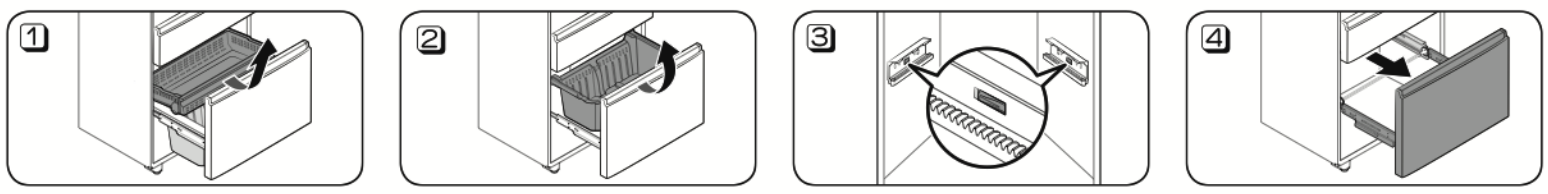

DA68-01853B-00